



SCOREBOARDS

Electric Drawings and ISC-85X Operator Instructions

BASKETBALL SCOREBOARD 5240



POINTS



MATCH



POINTS



1551 E 11th Street, Loveland, CO 80537 • 970-667-1000 • Fax: 970-667-1032 • www.coloradotime.com



Introduction

Congratulations on the purchase of your new electronic scoreboard. Your scoreboard is state of the art and designed for easy installation. This instruction booklet will provide you with general information on installing your scoreboard along with detailed information regarding your particular model. If further information is required please contact your CDS sales representative at 970-667-1000.

Service and Customer Information

In the event service is required for your scoreboard or if you wish to order replacement parts please contact your CDS sales representative at 970-667-1000.

To aid in your discussions, we suggest that you record the following information for reference:

MODEL NUMBER: _____

INSTALLATION DATE: _____

CDS SALES
REPRESENTATIVE: _____

CONTACT
INFORMATION: _____

CONTACT
PRODUCT
SERIAL NUMBERS: _____

Indoor Scoreboards

Your scoreboard will require a 120 VAC, 60 Hz, grounded receptacle located within 5 feet of the top-center of the scoreboard. Optional 230VAC, 60Hz, is also available. Typically the outlet will be a dedicated 15 Amp circuit. Refer to the model specific information provided in this package for the exact current load for your scoreboard. FIGURE 1 illustrates a generic installation including a controller. Seek the service of a qualified electrician to ensure the electrical installation meets all local electrical codes. CDS assumes no responsibilities for installations done by others.

NOTE: On scoreboards with the cULus mark, the scoreboard does not come equipped with a power cord as these units must be permanently wired in.

Data cabling for the scoreboard is available in standard lengths (connectors factory installed), or as a kit for custom lengths (connectors installed on site). See the DATA CABLING section for more information.

Wall mounting is the preferred method of installation. When determining the installation location, ensure the scoreboard is NOT hung from a non-rigid support. The scoreboard is shipped with mounting brackets which are located on the backside of the enclosure. The brackets are rotated to prevent damage during shipping. Remove and re-install the brackets so that the mounting holes are exposed past the edge of the scoreboard. Lifting eyebolts are provided on the top of the scoreboard to facilitate lifting of the unit to its final installation location. Using appropriate equipment, lift and secure the scoreboard to the wall. The type of fasteners selected should be suitable for the type of wall construction and have sufficient capacity to support the scoreboard. CDS recommends using 3/8" fasteners. Detailed information regarding mounting locations and fasteners recommendations for your scoreboard model is provided in the documentation attached.





Installation

Outdoor Scoreboards

Your scoreboard will require a 120 VAC, 60 Hz, grounded electrical feed. Typically the feed will be a dedicated 20 Amp circuit. Optional 230VAC, 60Hz, is also available. Refer to the model specific information provided in this package for the exact current load for your scoreboard. FIGURE 2 illustrates a generic installation including a controller. CDS recommends using **ONLY** grounded metal conduit. Seek the service of a qualified electrician to ensure the electrical installation meets all local electrical codes. CDS assumes no responsibilities for installations done by others. Data cabling for the scoreboard is available as a kit for installation with the grounded conduit (connectors installed on site). See the DATA CABLING for more information.

Pole mounting is the preferred method of installation. Seek the service of a qualified contractor to ensure the structure meets all local building codes. Any information provided by CDS is for INFORMATION USE ONLY. The scoreboard is shipped with mounting brackets which will require installation prior to mounting the scoreboard. All necessary hardware required to mount the brackets to the scoreboard is provided with your new scoreboard. Lifting eyebolts are provided on the top of the scoreboard to facilitate lifting of the unit to its final installation location. Using appropriate equipment, lift and secure the scoreboard to the structure. The type of fasteners selected should be suitable for the type of construction and have sufficient capacity to support the scoreboard. CDS recommends using ½", grade 8 fasteners. Detailed information regarding mounting locations and fastener recommendations for your scoreboard model is provided in the documentation attached.

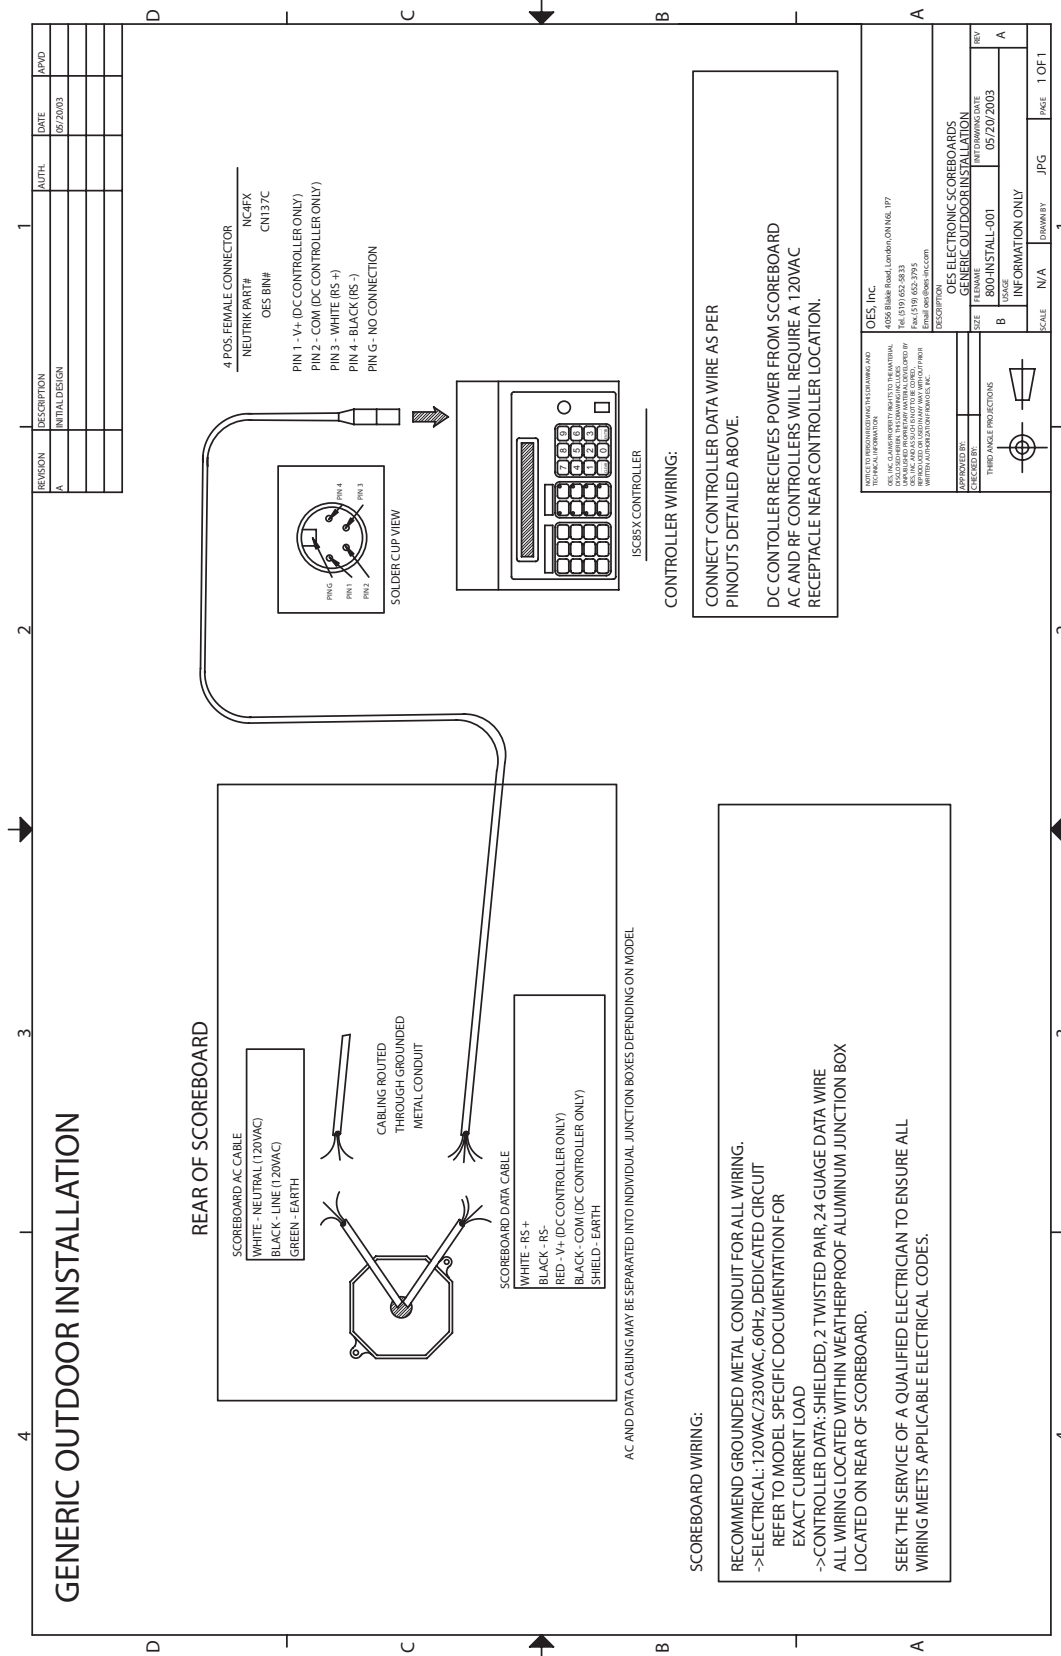

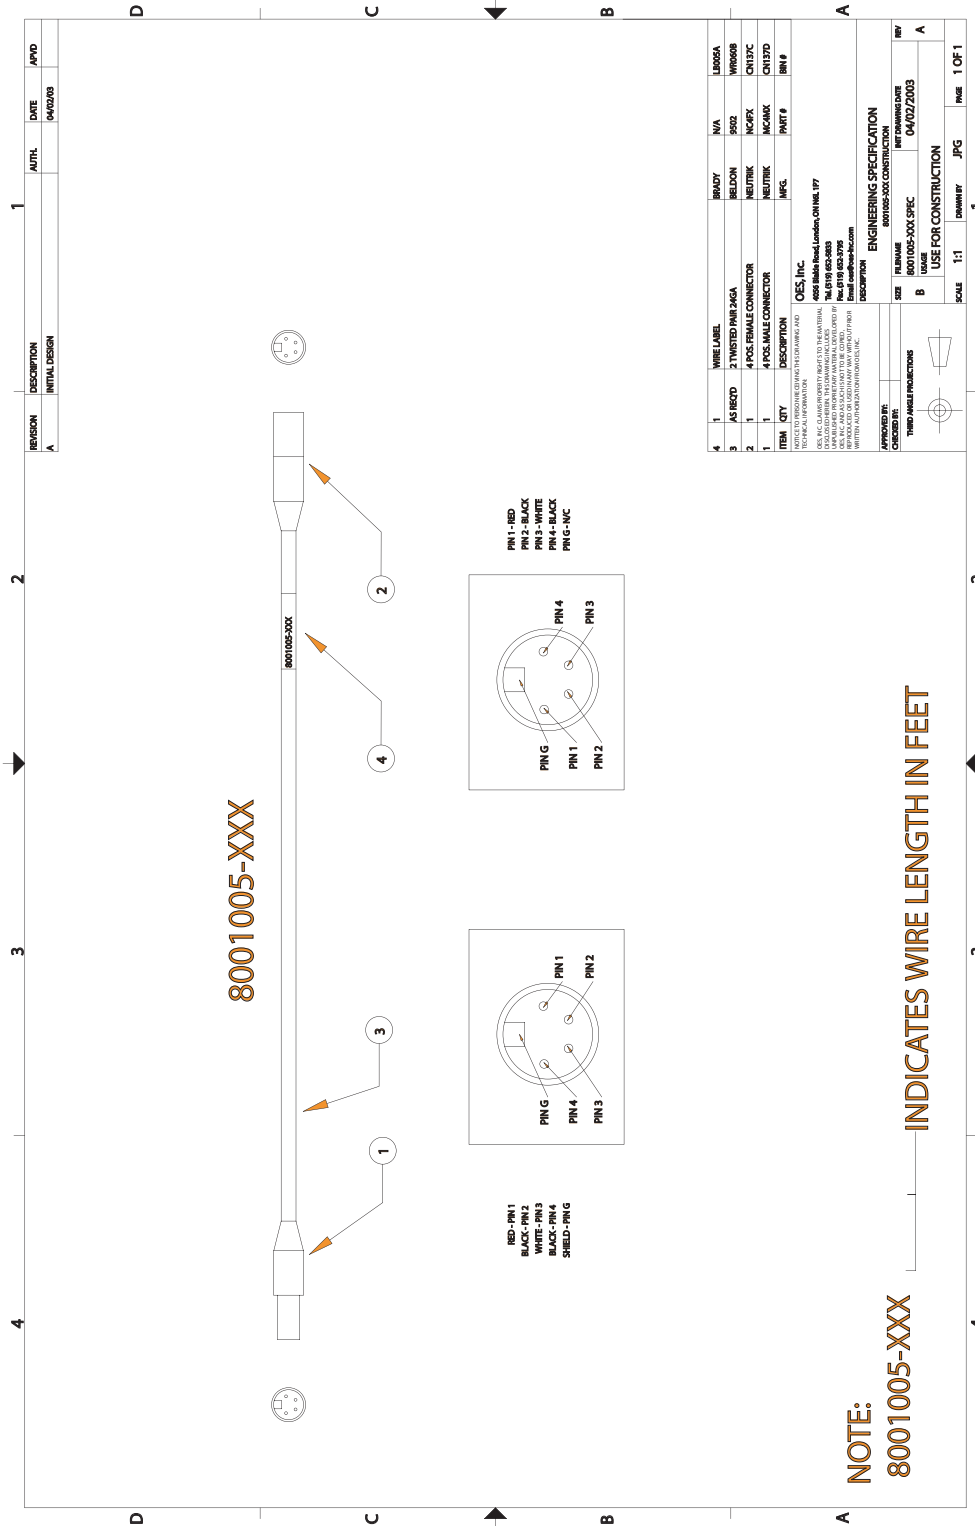

Installation

Data Cabling


Data cabling can be purchased as a pre-assembled cable in set lengths or as a kit to be assembled on site. Pre-assembled cables are available in multiple lengths of 25 feet (25ft, 50ft, 75ft, etc). Cable kits can be purchased in any desired length. If cabling is to be routed through conduit, CDS recommends purchasing the cable kit. FIGURE 3 outlines connection details for both. Your CDS sales representative can help you select the appropriate cabling choice for your particular installation.


Installation Accessories


A wide range of accessories are available to you and your facility to ease installation and protect your scoreboard investment. Products such as junction boxes and connector boxes are available to provide a professional appearance to any installation. RF radios are available for both indoor and outdoor scoreboards to eliminate costly controller cabling. Safety screens are available to protect the scoreboard from accidental impact. Protective bags are available for controller storage and transport while not in use. Please contact your CDS sales representative for more information on available accessories for your scoreboard.


Model Specific Documentation

The following pages are specific to your scoreboard model and include details on internal wiring, replacement parts, and specific mounting details. If any further information is required please contact your CDS sales representative at 970-667-1000.

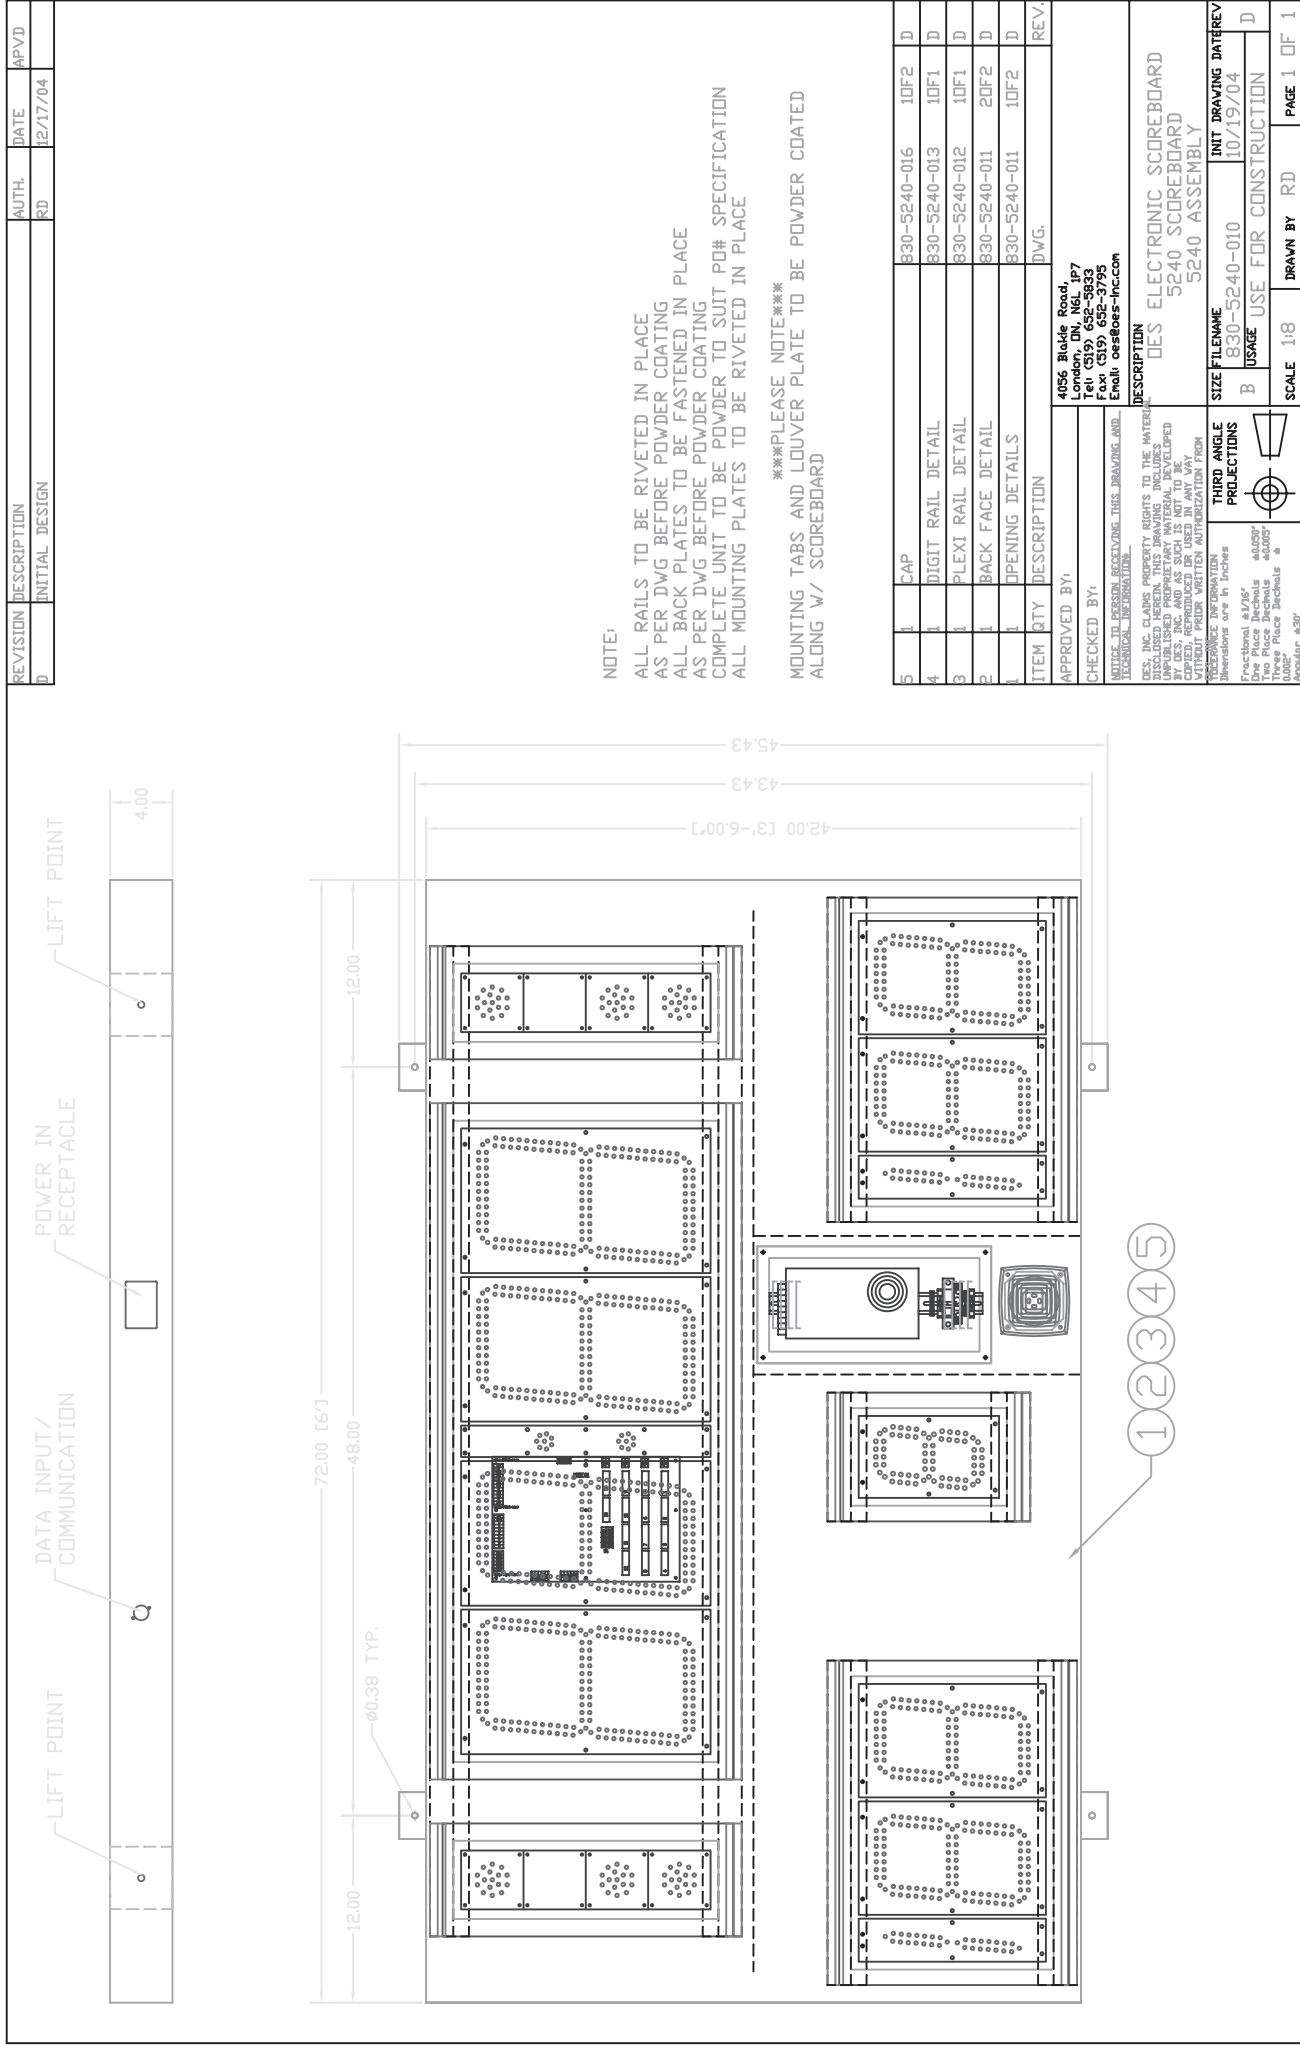

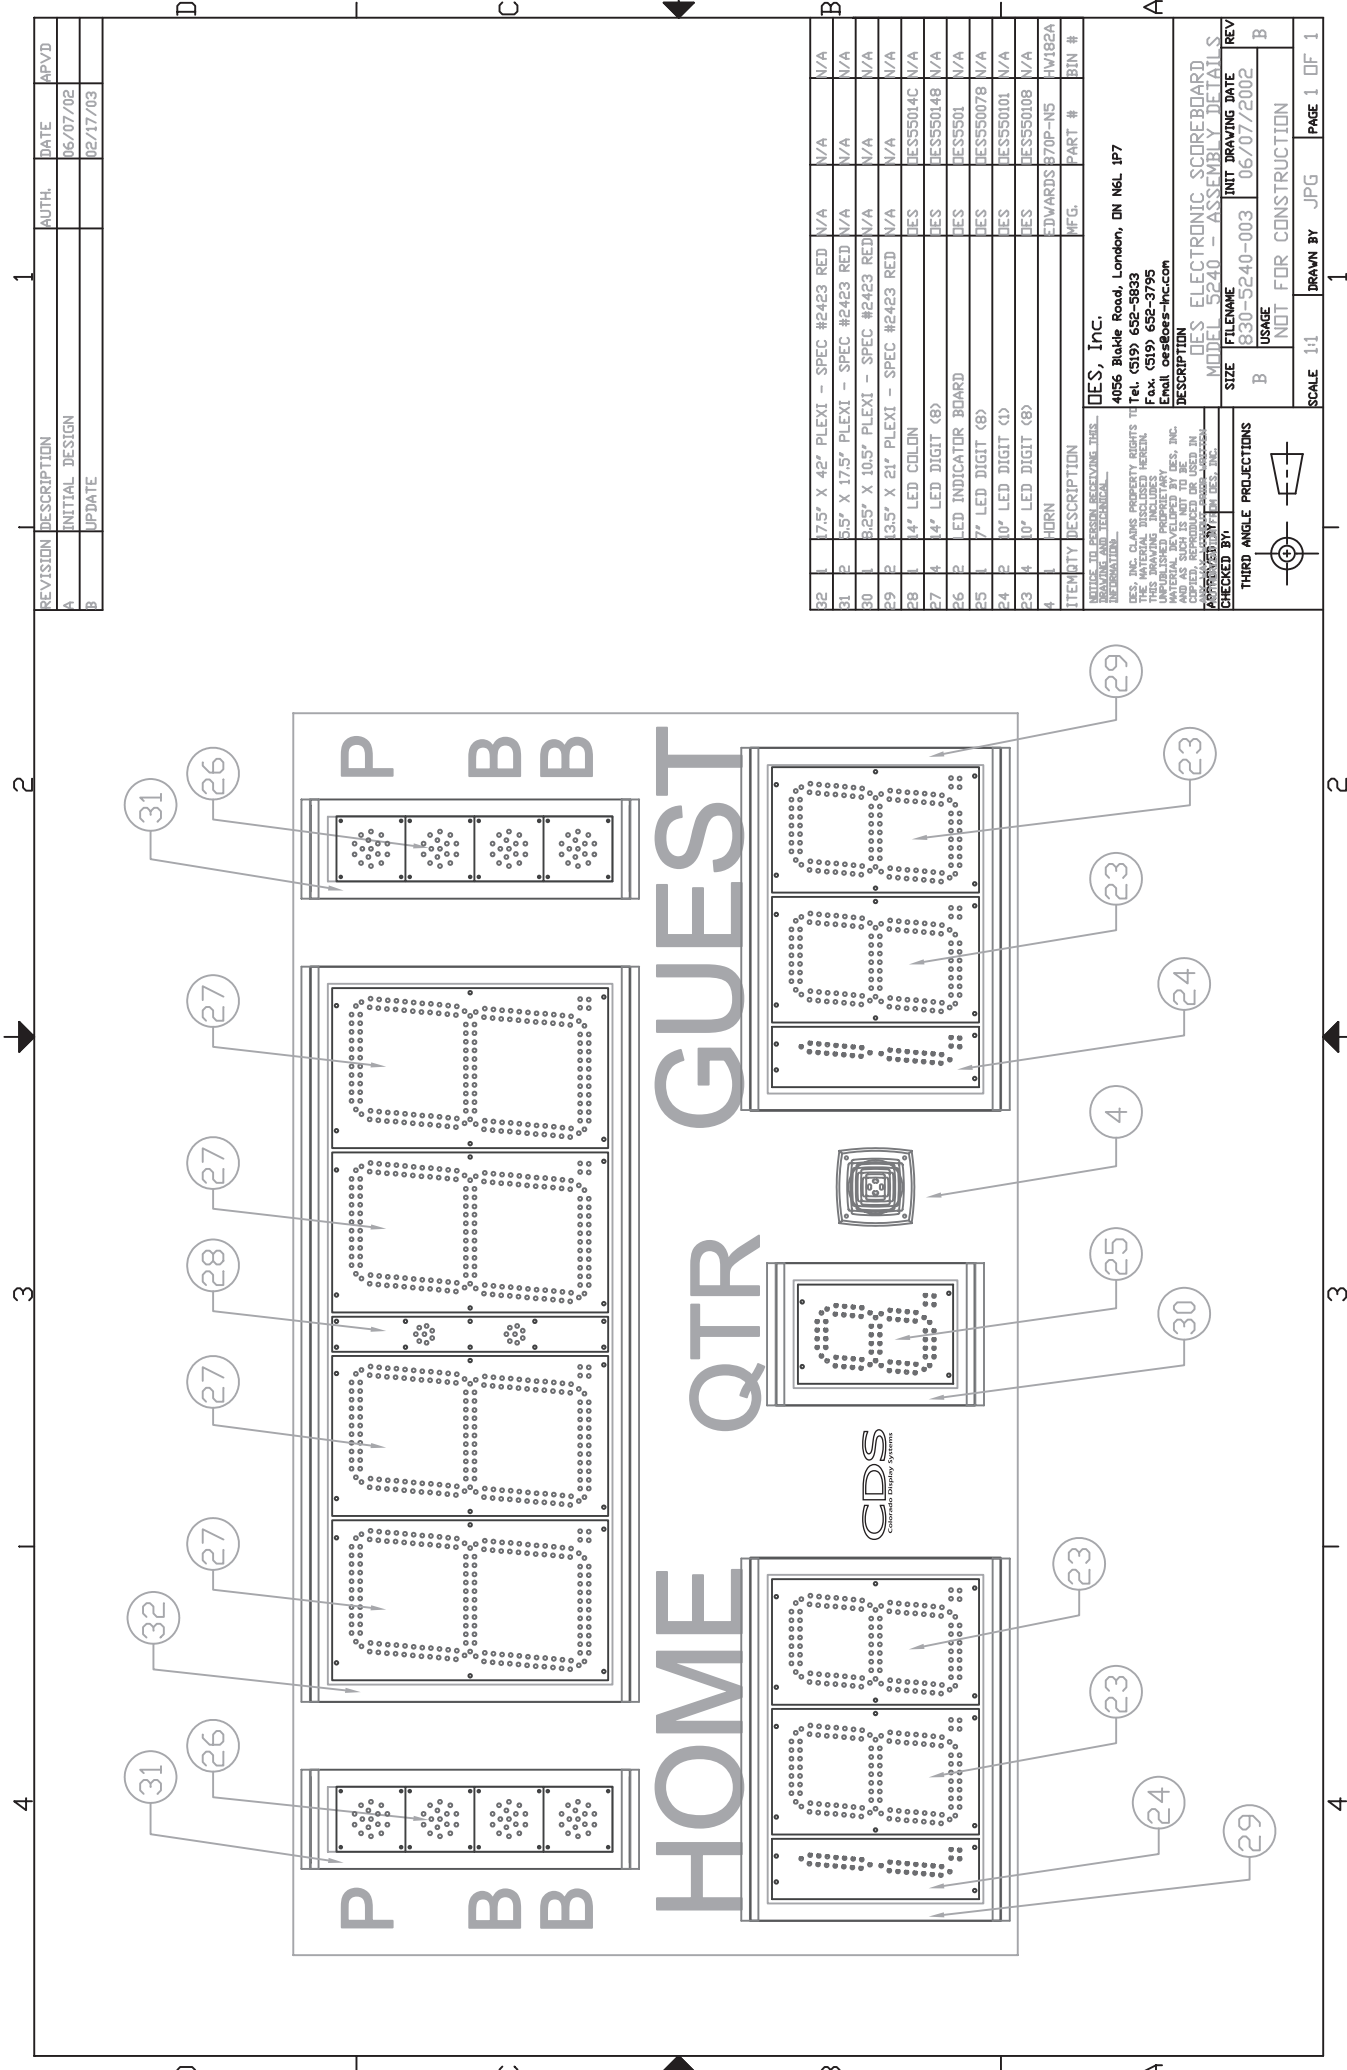

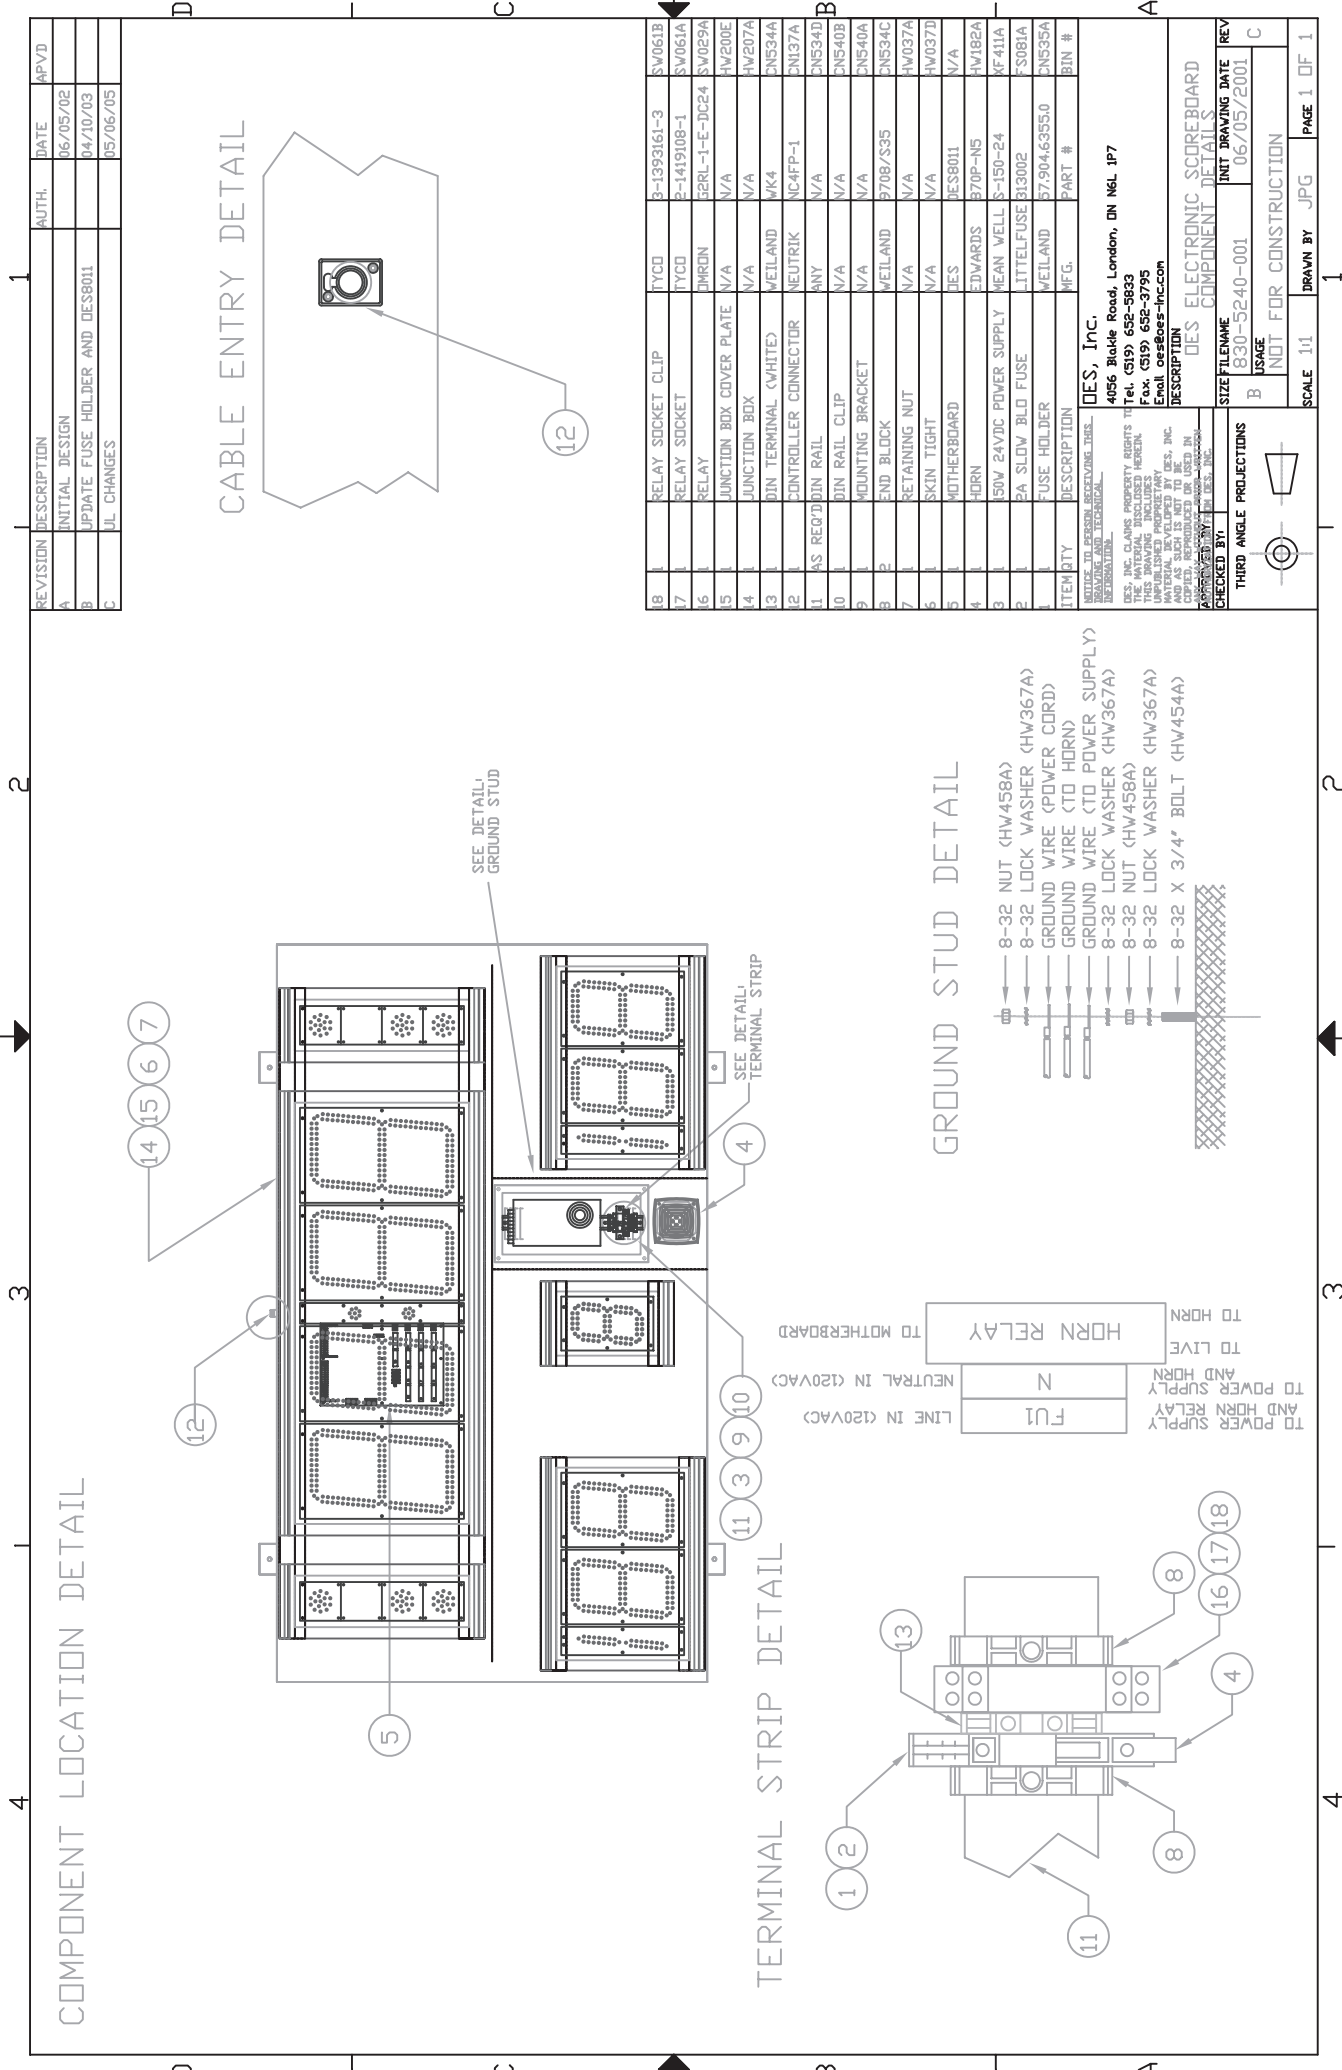

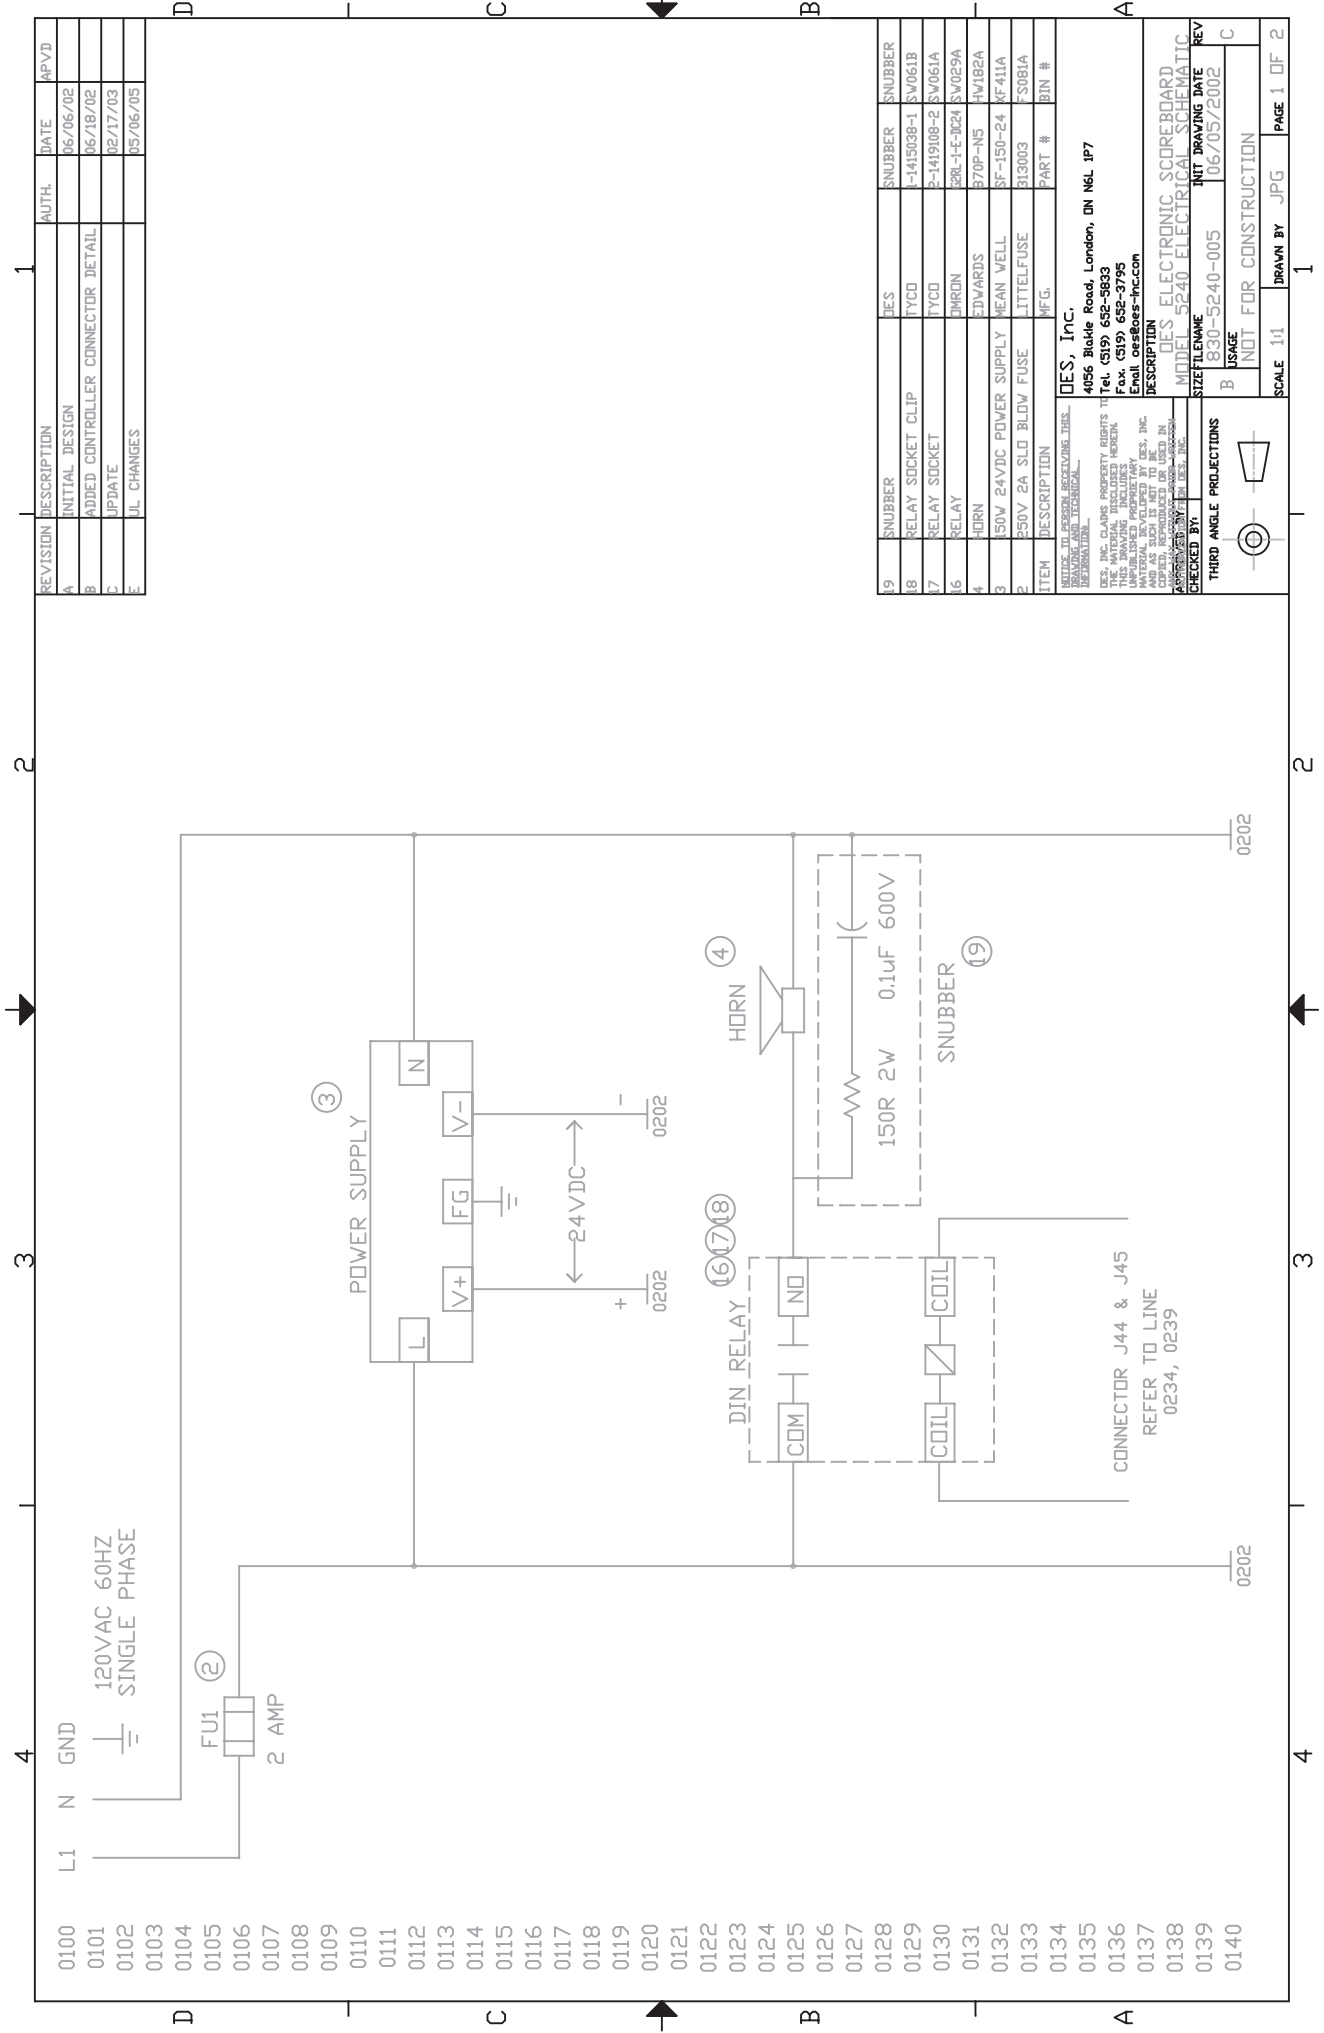

REVISION	DESCRIPTION	AUTH.	DATE	APVD.
A	INITIAL DESIGN		06/06/02	
B	ADDED CONTROLLER CONNECTOR DETAIL		06/18/02	
C	UPDATE		02/17/03	
E	UL CHANGES		05/06/05	

19	SNUBBER	DES	SNUBBER	SNUBBER
18	RELAY SOCKET CLIP	TYCO	1-1415038-1	SV061B
17	RELAY SOCKET	TYCO	2-141908-2	SV061A
16	RELAY	DMRDN	200-1-F-024	SV029A
4	HORN	EDWARDS	370P-N5	HV182A
3	150V 24VDC POWER SUPPLY	MEAN WELL	SF-150-24	KF411A
2	250V 2A SLO BLOW FUSE	LITTELFUSE	313003	S081A
ITEM	DESCRIPTION	MFG.	PART #	BIN #

DES, Inc.
4056 Blake Road, London, ON N6L 1P7
Tel: (519) 652-9833
Fax: (519) 652-3795
Email: sales@des-inc.com
Website: www.des-inc.com

DESCRIPTION

DES ELECTRONIC SCOREBOARD
MODEL 5240 ELECTRICAL SCHEMATIC

SIZE FILENAME
B 830-5240-005

INIT DRAWING DATE
06/05/2002

ISSUE
NOT FOR CONSTRUCTION

SCALE 1:1


DRAWN BY JPG

PAGE 1 OF 2


THIRD ANGLE PROJECTIONS

CHECKED BY: [Signature]

THIS DRAWING INCLUDES
ALL MATERIAL DISCLOSED BY DES, INC.
AND AS SUCH IS NOT TO BE REPRODUCED
OR USED IN ANY MANNER WITHOUT THE
WRITTEN PERMISSION OF DES, INC.





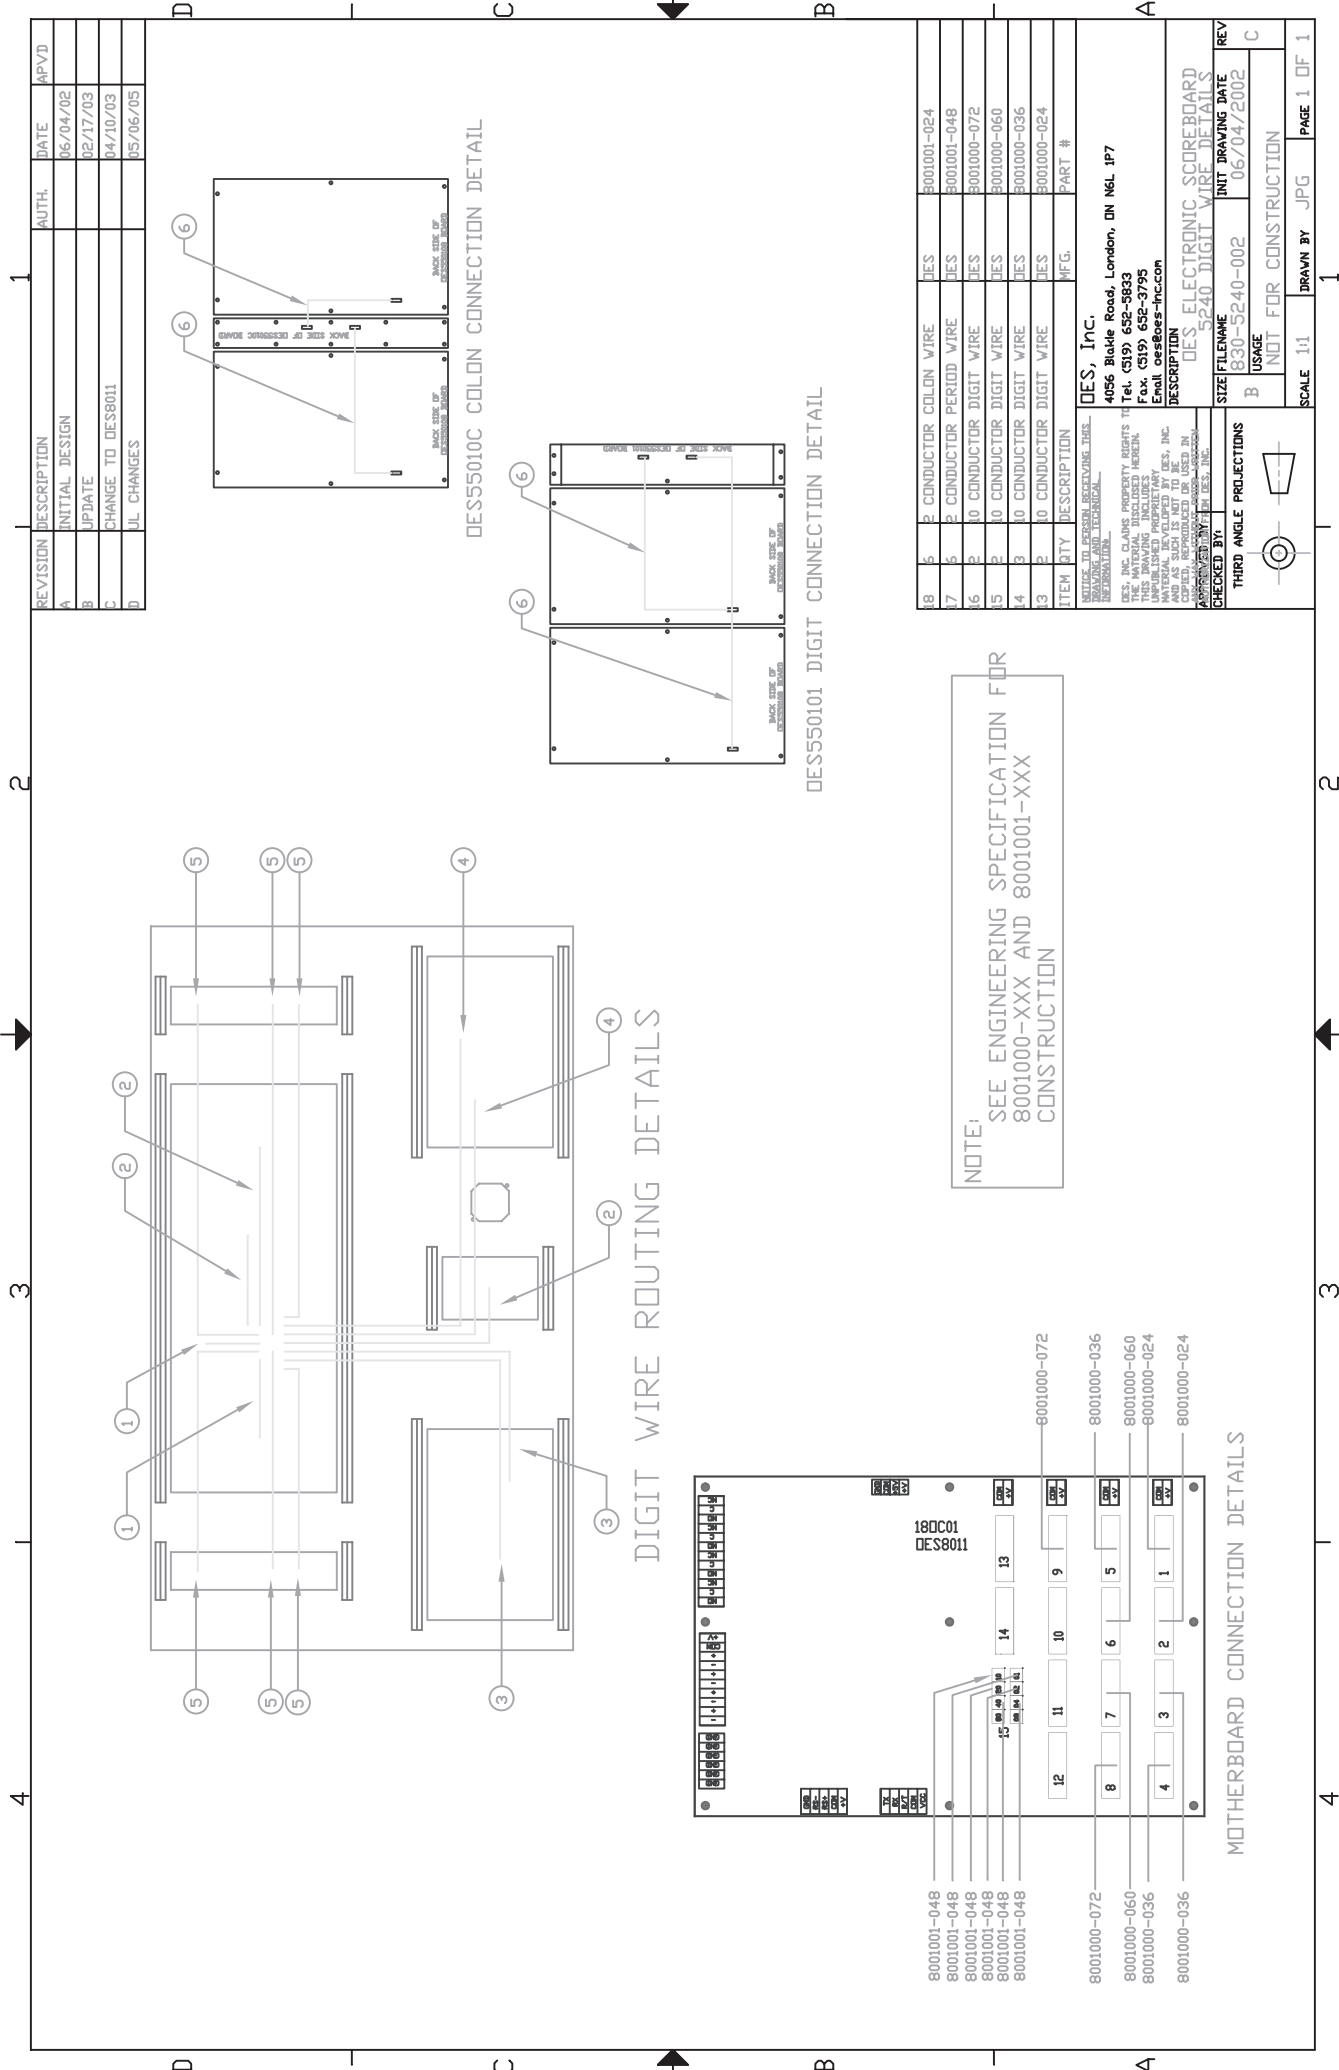

ISC85X Intelligent Controller



INTRODUCTION:

The ISC85x controller comes ready to use; no setup required. All settings are pre-set at the factory to the customer requirements. The settings can be accessed by the operator if necessary. There are a number of configure / set-up features within the controller. These features include: Turning the scoreboard off/on, setting up the sport and features of the scoreboard, setting the time of day (TOD), setting the contrast on the controller LCD display, and running the scoreboard through a system of tests.

NOTE: These configure features, including this instruction sheet, should be kept from the standard user and only made available to the person in charge of the scoreboard system.

OPERATION:

To enter into configure mode on the controller:

- Turn on controller.
- Turn RUN/STOP switch to STOP position.
- Press and hold the bottom button in the fifth column on the keypad until the configure menu appears (Button to the left of CLEAR). This button may be blank or may be labeled "CONFIG" or "SETUP".
- Select desired option using the numeric keypad.

OPTIONS:

1. Board Off/On:

- This blanks the entire scoreboard. This is only required on a few baseball scoreboard models, since the majority will blank on their own 15 seconds after the last communications for the controller.

2. Select Sport/Features:

- The first screen selects the sport, follow on screen instructions.

MODEL 52xx SYSTEM NOTE:

basketball, volley ball, and wrestling are valid selections.

MODEL 62xx SYSTEM NOTE:

Hockey is only valid selection.

ISC85X Intelligent Controller

The next screen selects the features.

- '0' indicates disabled
- '1' indicates enabled
- 'X' means '0' or '1' will depend on the system
(Contact factory if clarification is required.)

Basketball	5200	5210	5240
Time Out Left	0	0	0
Team Fouls	0	1	0
Player Fouls	0	0	0
Last Foul	0	1	0
Shoot Clocks	X	X	X

Hockey	6200 / 6220	6210 / 6225	6240
Shots On Goal	0	0	0
Penaltys	1	1	1
Time	1	1	0
Player	1	0	0
Shot Clocks	X	X	X
Shift Timer	X	X	X
Motherboard Filler	X	X	X

Follow on screen instructions to properly set-up features

NOTE: Improper settings will result in the scoreboard operating and displaying undesirably.

3. TOD

- This sets up the time of day on the clocks in the scoreboard system.
- Ensure all clocks that need to receive this setting are on and attached to the controller through the communication network.
- Follow on screen instructions to properly set-up TOD.

4. Contrast

- This controls the brightness / contrast of the LCD on the controller.

- Follow on screen instructions to properly set-up the contrast.


5. Board Test:

- This will test the scoreboard digits. The first test, All On, turns on everything. The other test, Rotate, has all digits counting from 0-9, then blank.
- These tests continue until you exit from the screen and then will return to the game displays.
- Follow on screen instructions to control the tests.

6. Exit

- This exits the configure screens without any changes.

ISC85X Intelligent Controller 5240 Instructions

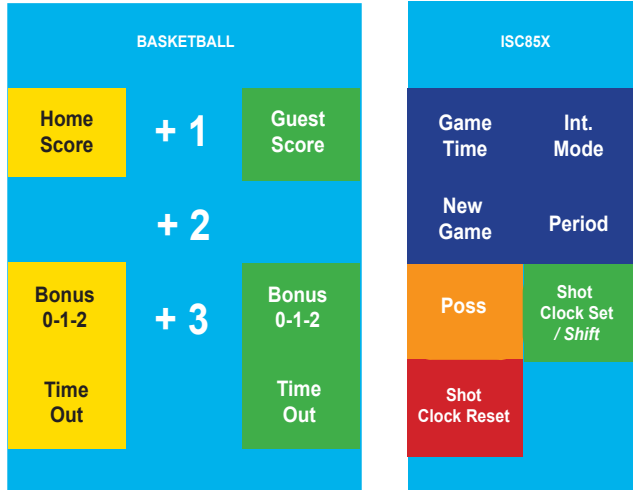

- START/STOP** the clock:
 - Flip switch ON/OFF (Rocker switch on the right side of the unit.)
- Manual **HORN**:
 - Activate by pressing the push button switch on the right side of the unit.
- Automatic **HORN**:
 - Horn sounds automatically when time hits 0:00.
 - Horn will sound for 1.5 seconds.
- To set **TIME**:
 - Press GAME TIME.
 - Enter "minutes" on the numeric keypad. Press Enter.
 - Enter "seconds" on the numeric keypad. Press Enter.
 - Enter "tenths of seconds" on the numeric keypad. Press Enter.
 - When pressed at the end of the period, the last entered time will appear and the period will automatically increment.
- To set **TIME OUT/INTERMISSION** timer:
 - Press INT. MODE.
 - Enter "minutes" on the numeric keypad. Press Enter.
 - Enter "seconds" on the numeric keypad. Press Enter.
 - To exit this mode, press INT. MODE again.
- To set **PERIOD/QUARTER**:
 - Press PERIOD.
 - Enter period on the numeric keypad. Press Enter.
- To set **SCORES**:
 - Press HOME SCORE or GUEST SCORE.
 - Enter score on numeric keypad. Press Enter.
- To **INCREMENT SCORES**:
 - Press HOME SCORE or GUEST SCORE.
 - Then press: +1, +2, or +3.
- To toggle **POSSESSION** between HOME/GUEST:
 - Press POSS.
- To toggle between "**BONUS**": No Bonus (0); Single Bonus (1); and Double Bonus (2).
 - Press HOME BONUS or GUEST BONUS.
- To set **TIME OUT**
 - Press HOME TIME OUT or GUEST TIME OUT.
 - Toggles On or Off.
- (Optional) To set **Shot Clock**:
 - Press SHOT CLOCK SET.
 - Enter "shot clock" length on the numeric keypad. Press Enter.
 - NOTE:** if not using the shot clock, set the shot clock time to zero.
- (Optional) To Reset **Shot Clock**:
 - Press SHOT CLOCK RESET.
- To set **SHIFT TIMER (IF ENABLED)**:

NOTE: The **SHIFT TIMER** counts down from the set amount. When the **SHIFT TIMER** is expired a one second horn will sound, then the **SHIFT TIMER** will reset and start counting down again.

 - Press SHIFT.**
 - Enter the shift time settings in minutes using the numeric keypad. **Press ENTER.**
 - To edit the current running shift time **Press SHIFT.** Then **SHIFT** again. Enter the minutes using the numeric keypad. **Press ENTER.** Enter the seconds using the numeric keypad. **Press ENTER.**

NOTE: On power up, the shift time will be 0:00, which leaves it in an inactive mode which means no horns will sound.